

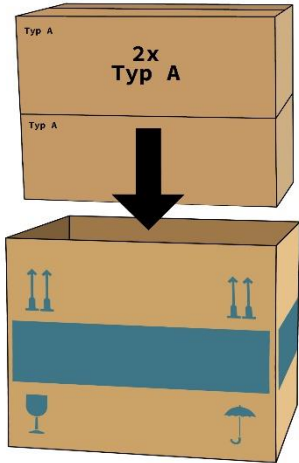


# Packaging instructions for standard sterilization cartons


The type B carton (Item no. 200004) fits four times in the standard sterilization carton. The type A carton (Item no. 200003) fits twice in the standard sterilization carton.

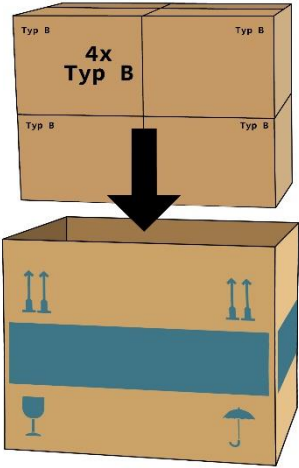

The standard sterilization carton (Item no. 200001) must be completely filled with solid material, e.g. Styrofoam plates. For the forward movement of the cartons in the plant pneumatic cylinders are used, which exert a high pressure on the carton.

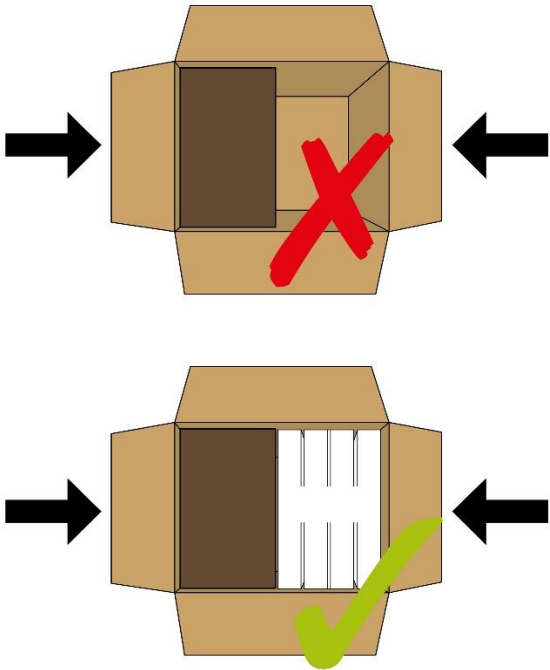

The standard sterilization cartons must be sealed with adhesive tape made of kraft paper (Item no. 200010). The length of the adhesive tape to close the lid and bottom should be around 75 cm and be placed with 10 cm overlap on the front sides. The approx. 35 cm adhesive strips should be arranged centrally.

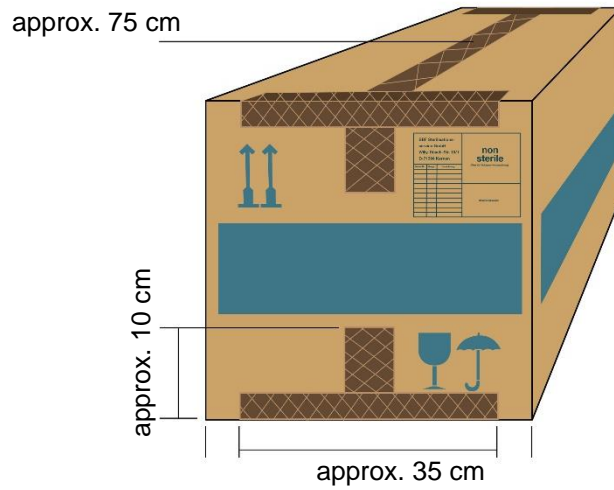

Plastic adhesive strips are not suitable and lead to system failures !!